



## WATER CRIMP SYSTEM INSTALLATION INSTRUCTIONS




### STEP 1:

Measure the pipe and cut to correct angle, ensuring it is straight and burr free. Always use a PEX pipe cutter.




### STEP 2:

Push fitting onto pipe until pipe is visible through the witness holes on the copper ring. This ensures that pipe has been inserted to the correct depth.

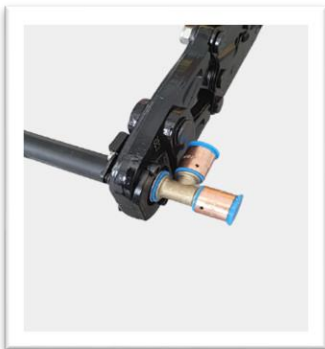

### STEP 3:

Position crimping tool and crimp the fitting until jaws of tool are completely closed.

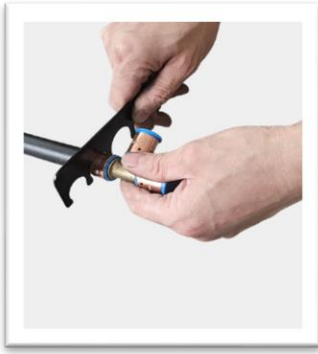

**STEP 4:**  
Test with Press Gauge.

**STEP 5:**  
At completion, carry out pressure testing as required per AS/NZS 3500 and or any requirements specified by local authorities prior to burying or concealing the SuperSeal Water Crimp System.